

WARNING!

Read all instructions. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury. The term power tool in all of the warnings listed below refers to your mains operated(corded) power tool.

IPX0

SAVE THESE INSTRUCTIONS

1. Work area

- a. Keep work area clean and well lit. Cluttered and dark areas invite accidents.
- b. Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- c. Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

2. Electrical safety

- a. Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed(grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- b. Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- c. Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.

3. Personal safety

- a. Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- b. Avoid accidental starting. Ensure the switch is in the off position before plugging in. Carrying power tools with your finger on switch or plugging in power tools that have the switch on invites accidents.
- c. Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

4. Power tool use and care

- a. Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- b. Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c. Disconnect the plug from the power source before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- d. Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tools operation. If damage, have the power tool repaired before use. Many accidents are caused edges by poorly maintained tools.
- e. Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and easier to control.
- f. Use the power tool, accessories and tool bits etc., in accordance with these instructions and in the manner intended for the particular type of power tool, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from intended could result in a hazardous situation.

5. Service

Have your power tool serviced by qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.



EC-1000

 
CORDESS POWERED-CUTTER

Unique, Light Weight Solution for All Your Cutting

Instructions Manual




EC-1000 & Accessories

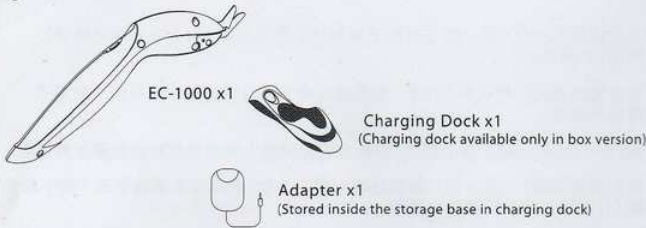

*Lithium Battery is pre-installed in the cutter.

*Charging dock is only available for box version and is not included in blister pack version.

 Function

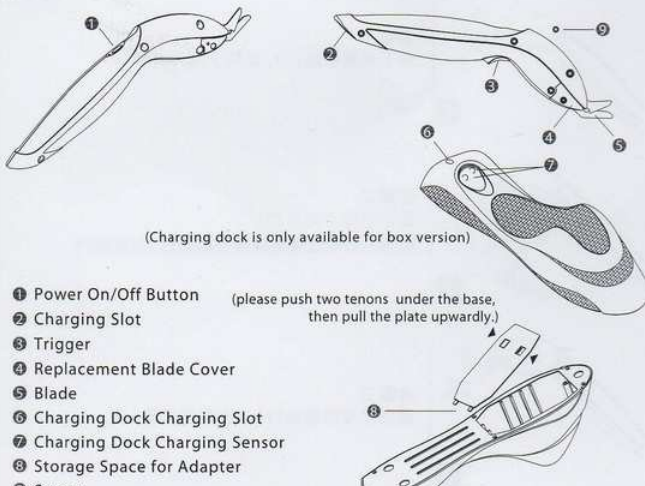

Using the EC-1000

 
- Please charge the cutter at least for 8 hours before the first use.
- Afterwards it will take about 4 hours for a full charge.
- To turn the cutter on, press the power on button (1). A blue led light will indicate the power-on status.
- When the blue led indicator is on, squeeze on the trigger(3) to proceed with the cutting.
- Press the power button (1) again to turn off the unit.

⚠ Please charge the cutter at least for 8 hours before the first use.

Replacing Blade



Step One:
Unscrew the replacement blade cover to remove the cover(4).

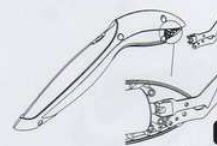

Step Two:
Remove the blade (5).
please make sure the U-slot on the ball-shaft on the motor with blade.



Step Three:
Screw on the blade screw (5) and the cover as before(4).