

WARNING!!

Read all instructions Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury. The term power tool in all of the warnings listed below refers to your mains operated power tool.

IPX0



SAVE THESE INSTRUCTIONS

1. Work area

- a. Keep work area clean and well lit. Cluttered and dark areas invite accidents.
- b. Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- c. Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

2. Electrical safety

- a. Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed(grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- b. Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- c. Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.

3. Personal safety

- a. Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- b. Avoid accidental starting. Ensure the switch is in the off position before plugging in. Carrying power tools with your finger on switch or plugging in power tools that have the switch on invites accidents.
- c. Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

4. Power tool use and care

- a. Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- b. Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c. Turn the power tool switch A to OFF before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- d. Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tools operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained tools.
- e. Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and easier to control.
- f. Use the power tool and accessories in accordance with these instructions and in the manner intended for the particular type of power tool, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from intended could result in a hazardous situation.

5. Service

Have your power tool serviced by qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.



Instruction Manual



This is not a toy
Please Keep Out Of Reach Of Children.
CAUTION
Risk of Electric Shock




The trademark and artworks are the intellectual property which is preserved by GREAT KNIVES MANUFACTURE Co., Ltd
All offenses against the copyright will be sued by the owner.

Please visit us at :
www.greatknives.tw

EC-2000 & Accessories *Lithium Battery is pre-installed in the cutter.



Start using

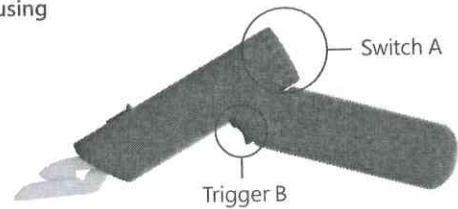

Replace blade **WARNING:** Be sure to turn the switch A to OFF before replacing the blade.

- latch back

Step 1: Pull the latch to the very back
- pull up

Step 2: Push the cutter head up from the bottom
- pull forward

Step 3: Wiggle the cutter head to release
- reinstall

Step 4: Reverse above steps to reinstall

*Pay attention to the tenon position when reinstalling the blade

Turn switch A clockwise to ON position, then press the trigger B to start cutting.

Turn switch A counter-clockwise to OFF position to turn off the machine.

Usage time & charging

EC-2000 features a high capacity lithium battery
It takes about 90 minutes to fully charge the battery.
The battery can be used continuously for about 60 minutes. Actual cutting time depends on the cutting material/thickness.
It can be used while plugged in. The downtime during cutting will charge the battery.
It takes 1.5 hours to charge for the first time.

LED instructions

USB-C charging port is located in the bottom

Red light: Charging
Green light: Charging complete



Flashing red light: When the device overheats, low on power, or other faults, the red light flashes 5 seconds

Precautions

Keep out of reach of children.
Use the original charger to avoid damage.
Never force your cuts. If cutting is difficult, stop cutting and turn the switch OFF to avoid damages.
Rechargeable Lithium-Ion batteries have a limited life and will gradually lose their capacity to hold a charge.
As the battery loses capacity, the length of time it will power the product (run time) decrease
* Overheating protection: If the device is overheated, it will be shut down momentarily as a safety measure. It can be used again after waiting for a moment.